

## KM-C3225E




The KM-C2525E, KM-C3225E, KM-C3232E and KM-C4035E Copiers use an **electronic counter** to record the copy counts. This can be read off the LCD display or printed out in a report.


Use the following steps to check the electronic copy count or print the report.

**Note: you need to report the totals for Monochrome, Mono Colour and Full Colour.**

**STEP 1** Press the **System Menu / Counter** button on the Operator Panel. The default screen will appear on the display.

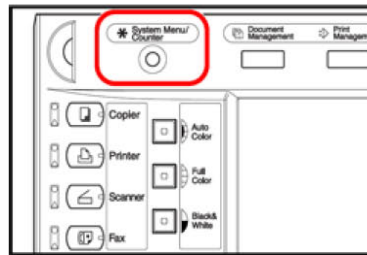

**STEP 2** Press the **Check the Counter** button on the touch display. The total number of copies will be displayed.

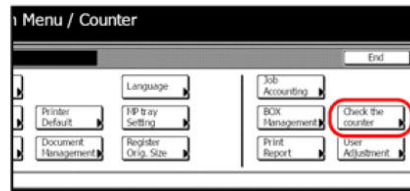

**STEP 3** To print the Counter Report press the **PRINT REPORT** key on the display.

Counter check					Close
Number print	Copy	Printer	Fax	Total	
Black & White	1,072	0	1	1,073	
Monocolor	0			0	
Full-color	601	1		602	
Total	1,673	1	1	1,675	
Num. of pages					
	Copy	scanner	Fax	Total	
Original	774	2,194	1	2,969	Print report
Default setting					

**STEP 4** Press the **CLOSE** key on the touch screen to return to normal COPY mode.

Counter check					Close
Number print	Copy	Printer	Fax	Total	
Black & White	1,072	0	1	1,073	
Monocolor	0			0	
Full-color	601	1		602	
Total	1,673	1	1	1,675	
Num. of pages					
	Copy	scanner	Fax	Total	
Original	774	2,194	1	2,969	Print report
Default setting					